

### HC711 ADAPTER LIST

<b>Manufacture</b>	<b>Model</b>	<b>Version</b>	<b>Method</b>	<b>Adapter</b>
BMW	3 SERIES	EWS2/3 1998-(0D46J)	Programming MCU	HC711 Adapter
BMW	5/7/X5 SERIES	EWS2/3 2003-2007(0D46J)	Programming MCU	HC711 Adapter
BMW	EWS	BMW EWS(2D47J)	Programming MCU	HC711 Adapter
BMW	MINI	EWS2/3 (0D46J)	Programming MCU	HC711 Adapter
<b>Programmer</b>	<b>MCU TYPE</b>		<b>Method</b>	<b>Adapter</b>
	11E20(1H19S)		Programming MCU	HC711 Adapter
	11E9(1B60R/D82R/E22B)		Programming MCU	HC711 Adapter
	11EA9(0D46J)		Programming MCU	HC711 Adapter
	11EA9(2D47J/1D47J)		Programming MCU	HC711 Adapter
	11F1(2F37E)		Programming MCU	HC711 Adapter
	11F1(E87J)		Programming MCU	HC711 Adapter
	11K1(2D58N)		Programming MCU	HC711 Adapter
	11K4(1E62H/0E75J)		Programming MCU	HC711 Adapter
	11KA4(1E59B)		Programming MCU	HC711 Adapter
	11KS2(0H95B)		Programming MCU	HC711 Adapter

	11KS4(0E57S/0F60M)	Programming MCU	HC711 Adapter
	11KS8(1H96P)	Programming MCU	HC711 Adapter
	11P2(2E74J/3E74J)	Programming MCU	HC711 Adapter
	11PH8(0H30R)	Programming MCU	HC711 Adapter
	711E9(4K81H)	Programming MCU	HC711 Adapter
	711E9(5C47M)	Programming MCU	HC711 Adapter
	711K4(1K59D)	Programming MCU	HC711 Adapter
	711P2(1E53M)	Programming MCU	HC711 Adapter