

## 1 Inter-Link soft

Set up inter-link.exe, see video file:

video:\set up software:\inter\_link.rmvb

## 2 install USB driver

Connect hand-held tool to PC by USB port:



Power on the hand-held tool:



Power Socket

Select “Firm update” in menu of hand-held tool, then install usb driver,  
see video file :

video:\driver:\drivesoft.rmvb

### **3 Software Update**

Connect hand-held tool to PC , and make sure that your PC is on internet.

Power on the hand-held tool, then run inter-link soft on your PC. Select  
“soft update” in menu of hand-held tool, then click “software update”  
on window of inter-link soft. See video file:

video:\software update:\ software update.rmvb

**(Note: The software update will take about 10 minutes, during the processing do not power off or disconnect the USB cable.)**

### **3 Hardware Update**

Hardware update is only for the authorizations of some obd-functions.

Before doing hardware update, you have to contact your dealer or [www.smelecom.com](http://www.smelecom.com) first.

Connect hand-held tool to PC , and make sure that your PC is on internet.

Power on the hand-held tool, then run inter-link soft on your PC. Select “Firm update” in menu of hand-held tool, then click “hardware update” on window of inter-link soft. See video file:

video:\hardware update:\ hardware update.rmyb