


# How to Install the Smelecom Driver for PC-LINK

With your tool connected to your computer by the USB lead, you should follow the procedure shown to install the Smelecom driver from your computers desktop.

1



2

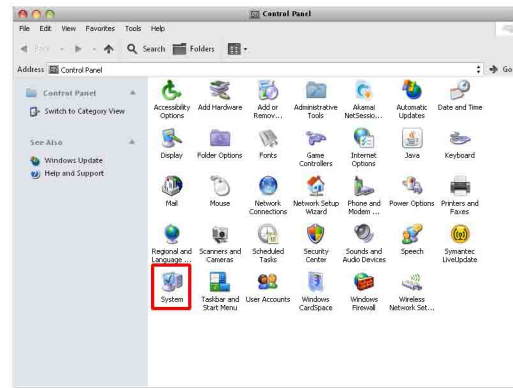


3




4




5

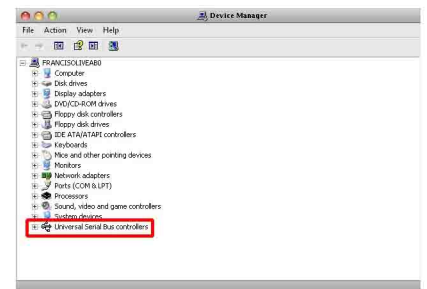

6

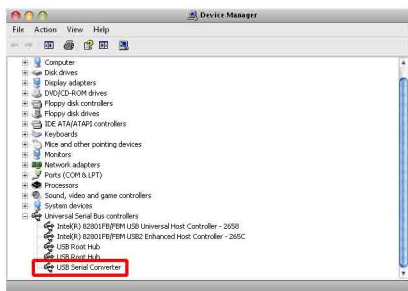


7

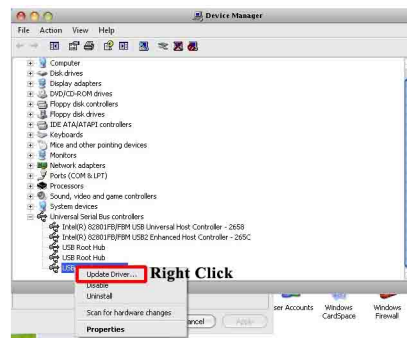


8




9

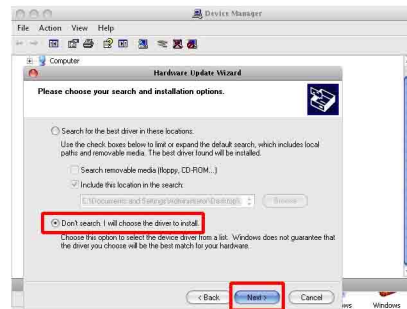


10

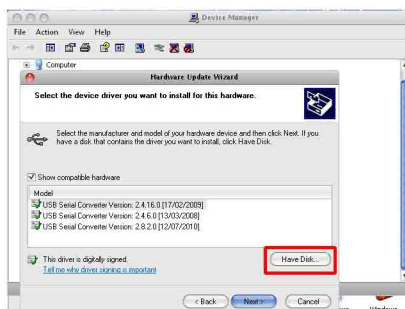


11

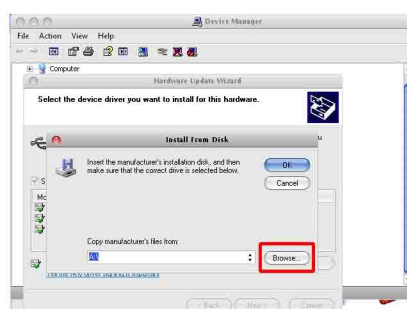


12

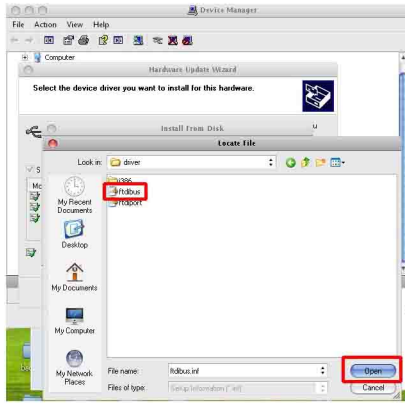


13

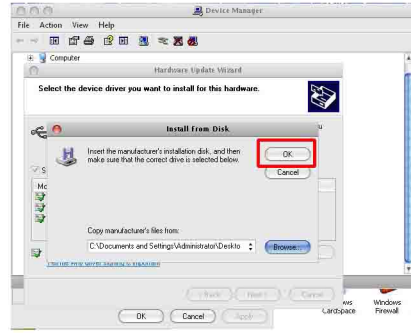


14

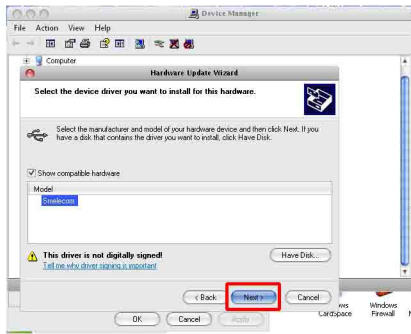


15

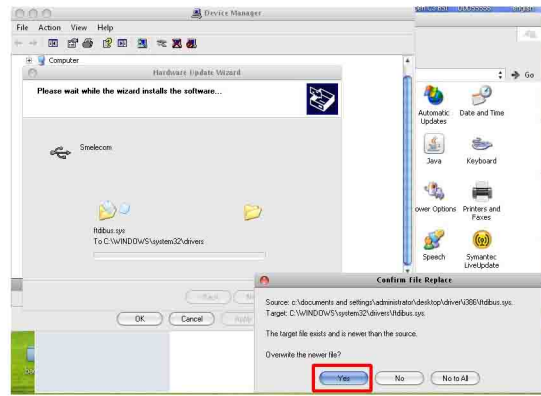


16

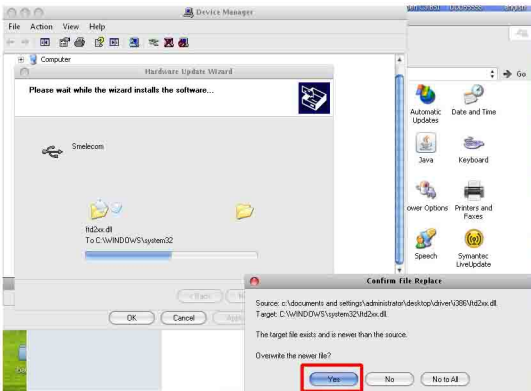

17

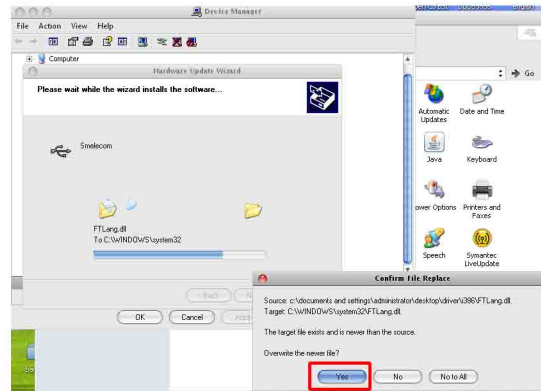

18

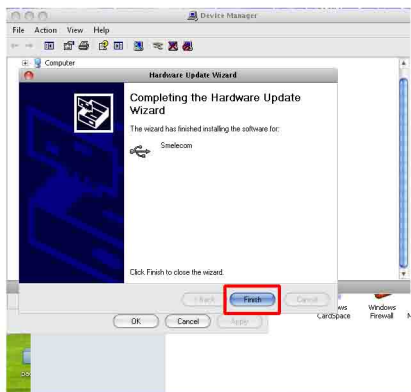

19

