


Manual for AUDI A4/Q5 Key Function.

Connect OBD adapter and CODE BOX to the transponder adapter first, then connect them to the machine.




PICTURE 1

Connect OBD adapter to the diagnostic socket of the car, choose “IMMO” from the main menu,

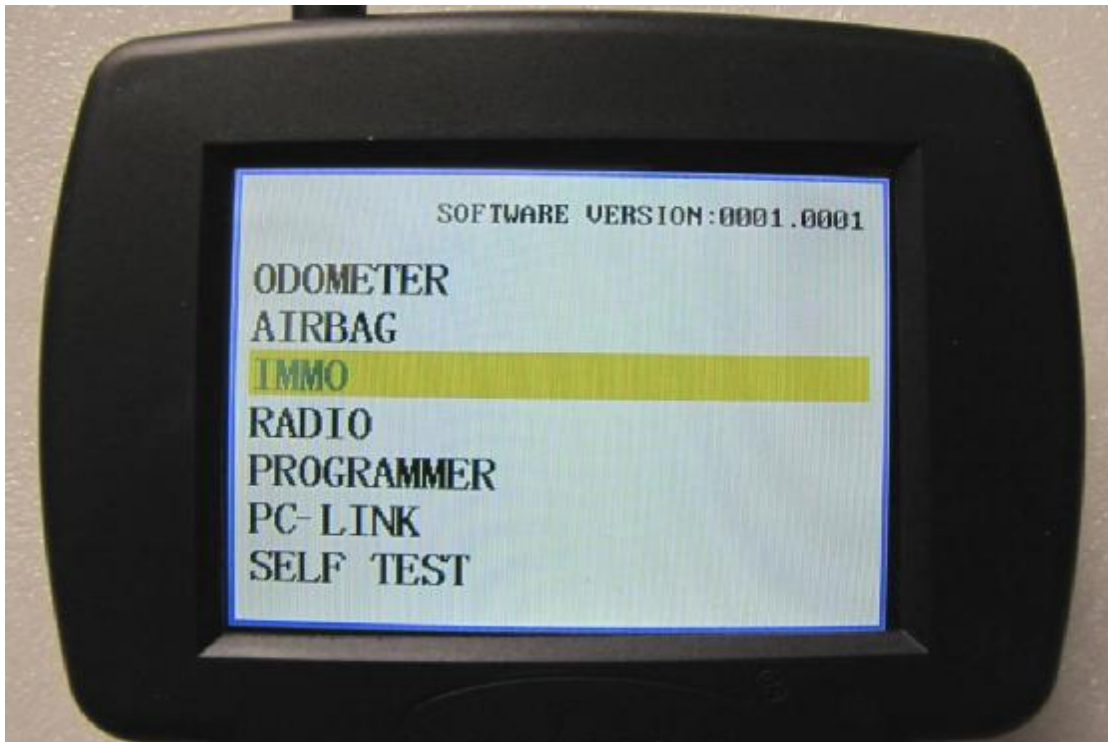

PICTURE 2


Choose "AUDI" menu, then "AUDI 5TH IMMO SYSTEM"

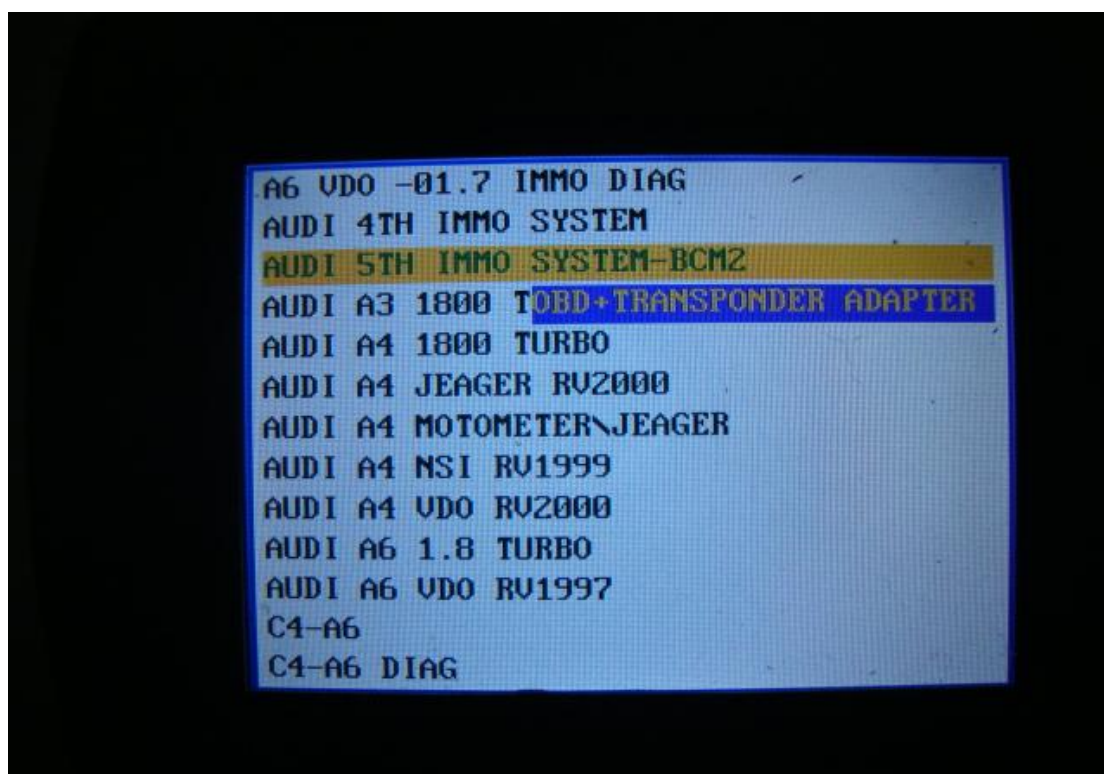


PICTURE 3

Under "5 TH IMMO SYSTEM", there are 3 options as the following picture shows. The following will show you how they work.

NOTE: When installing or removing the BCM2, please according the picture followed.

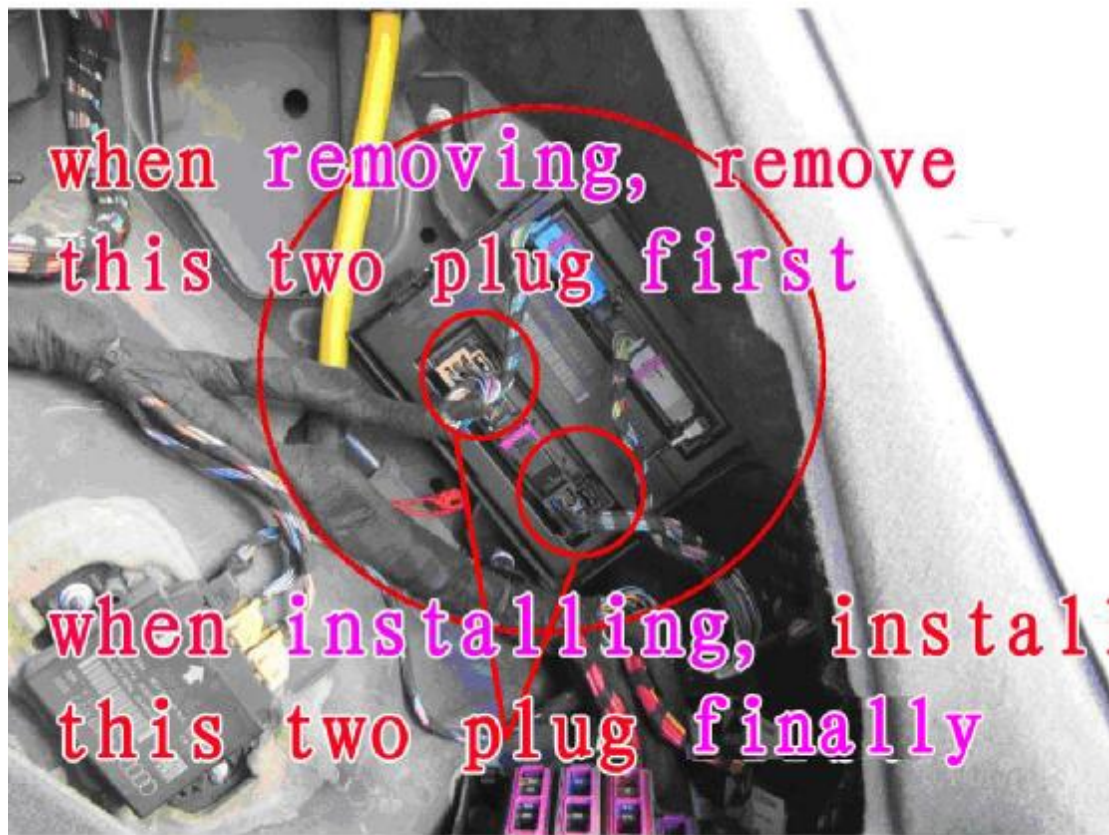


1. Choose "READ BCM2".

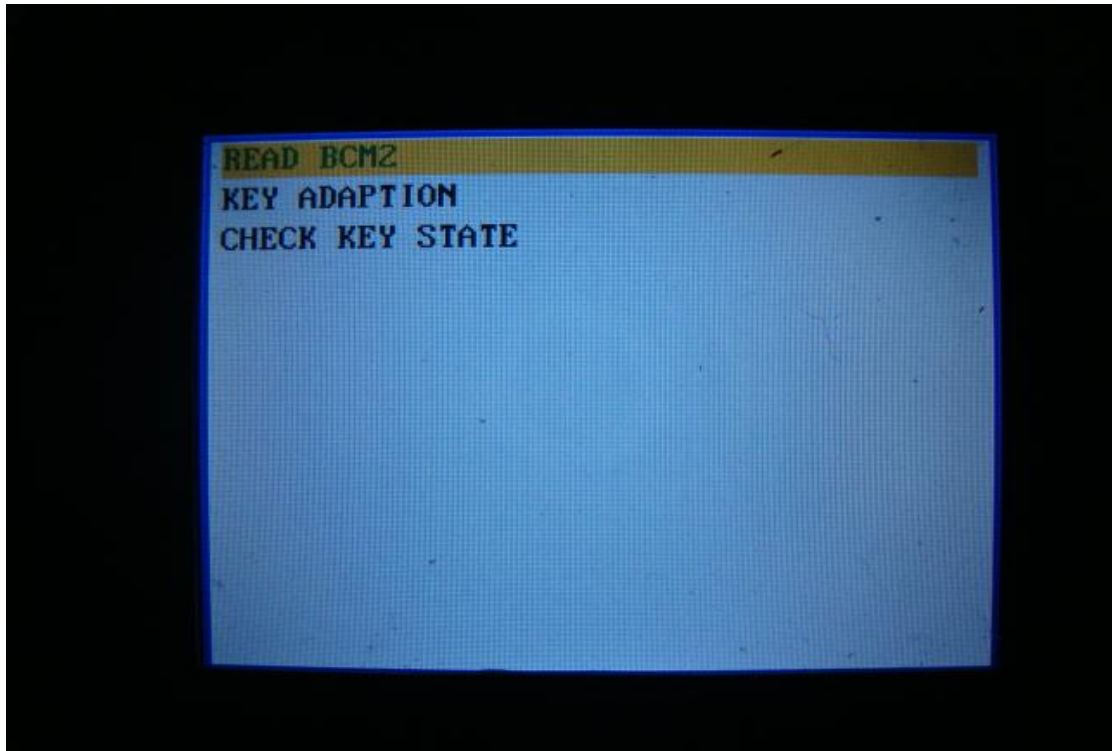


PICTURE4

This option is for reading the BCM2 dump with the BCM2 adapter . The dump is used for key adaption in the second menu. Connect wires as picture5 and picture6.

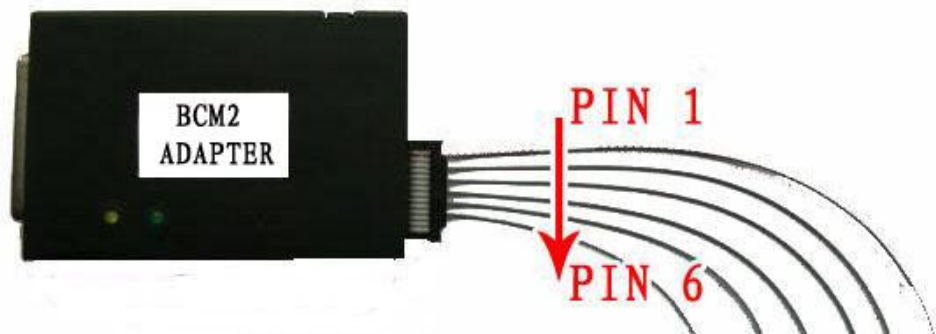


PICTURE5

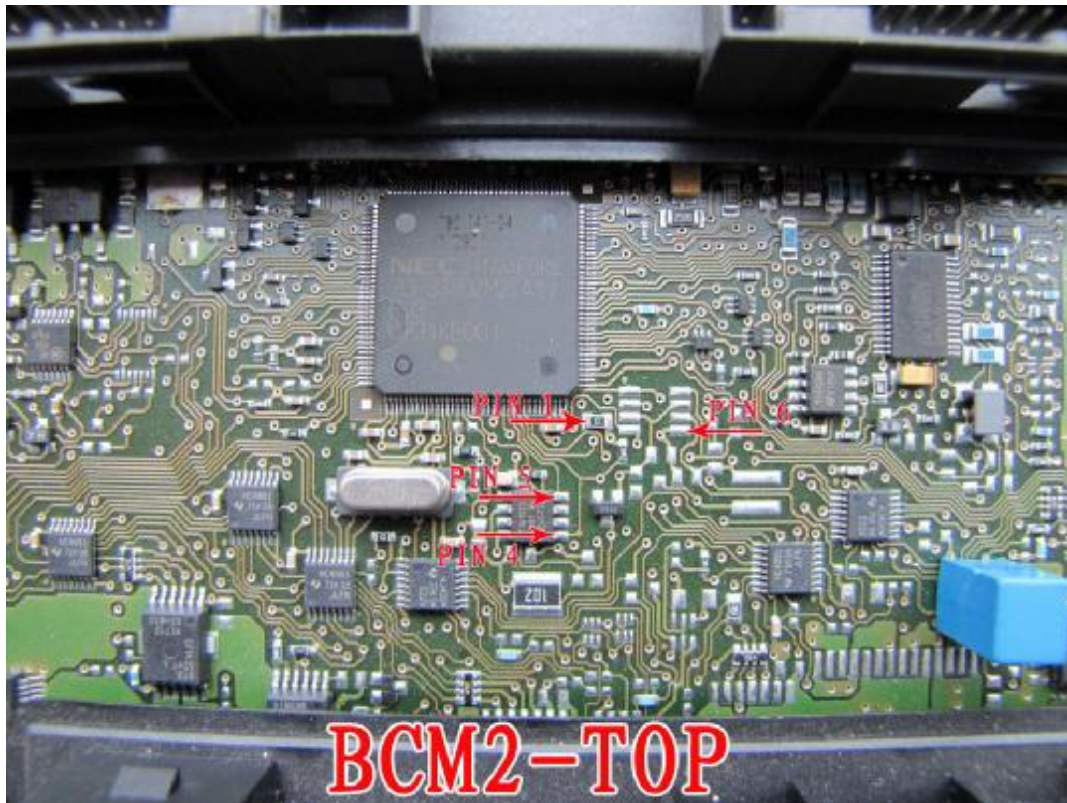


PICTURE6

2. “KEY ADAPTION”. This option is used for key adaption.

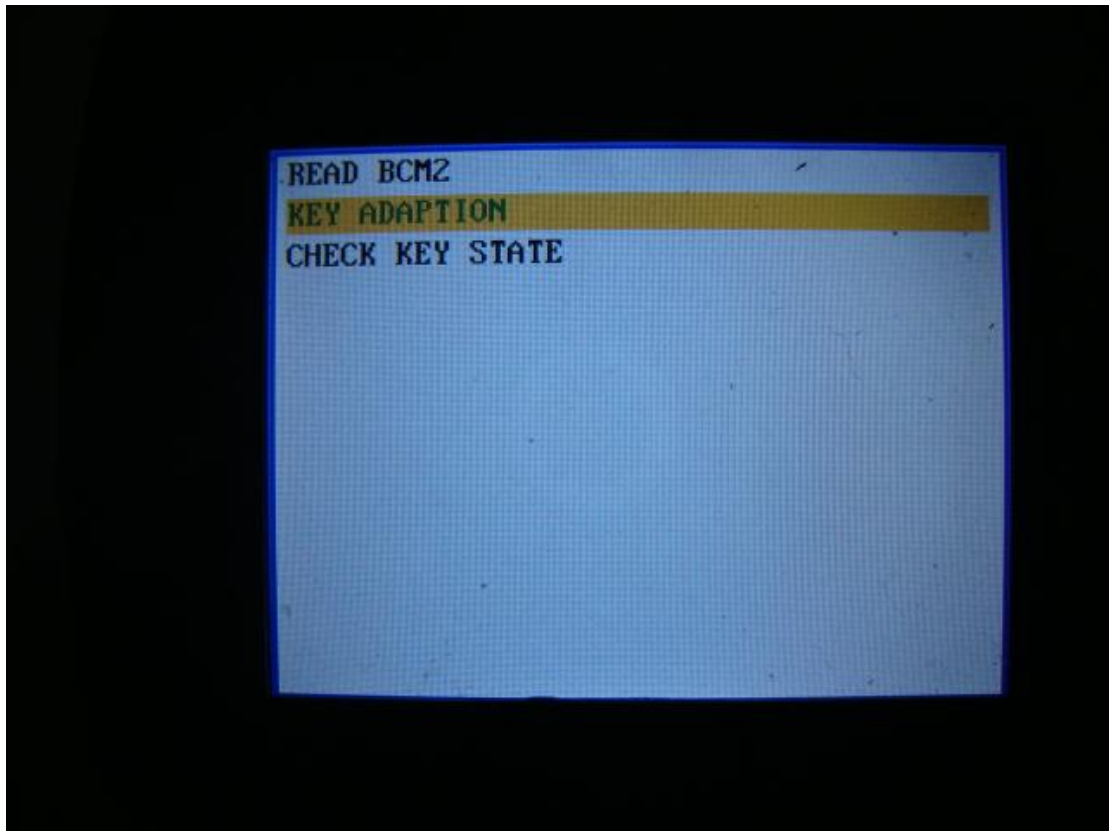


PICTURE 7

Read and save the BCM2 dump, then make the BCM2 original and install it back to the car. Under this option you will see the message as followed.

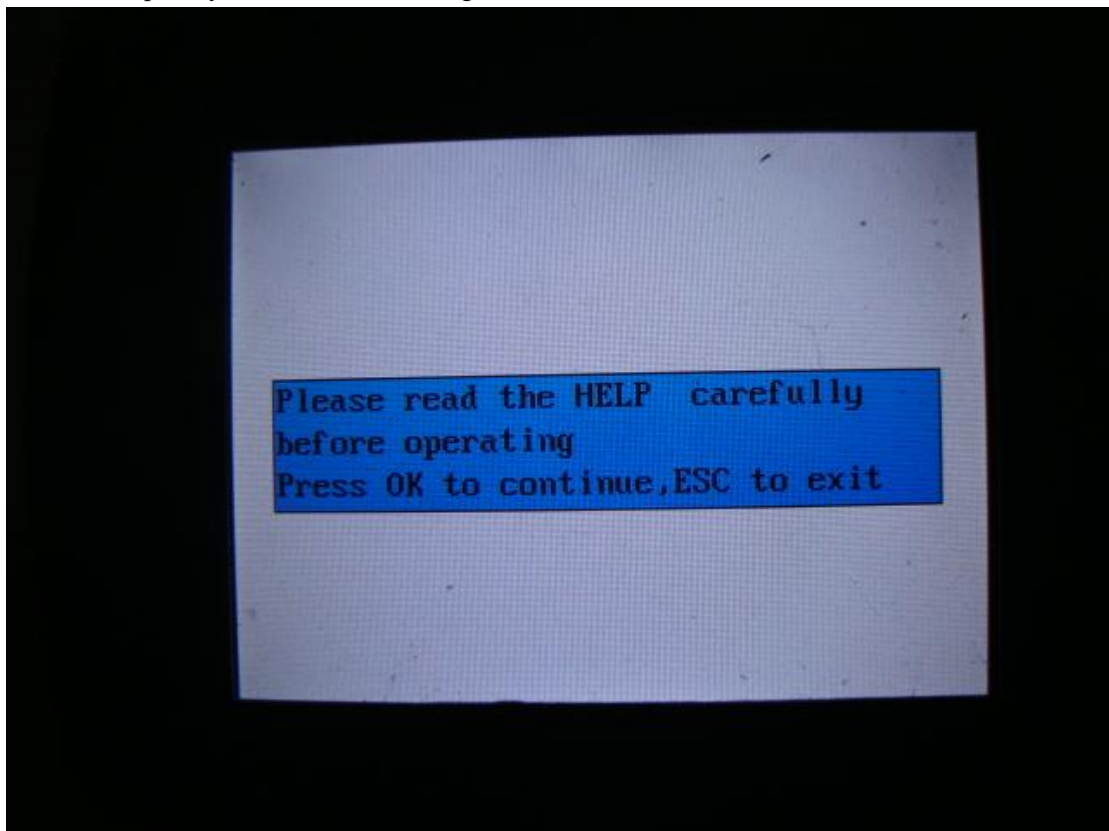


PICTURE 8

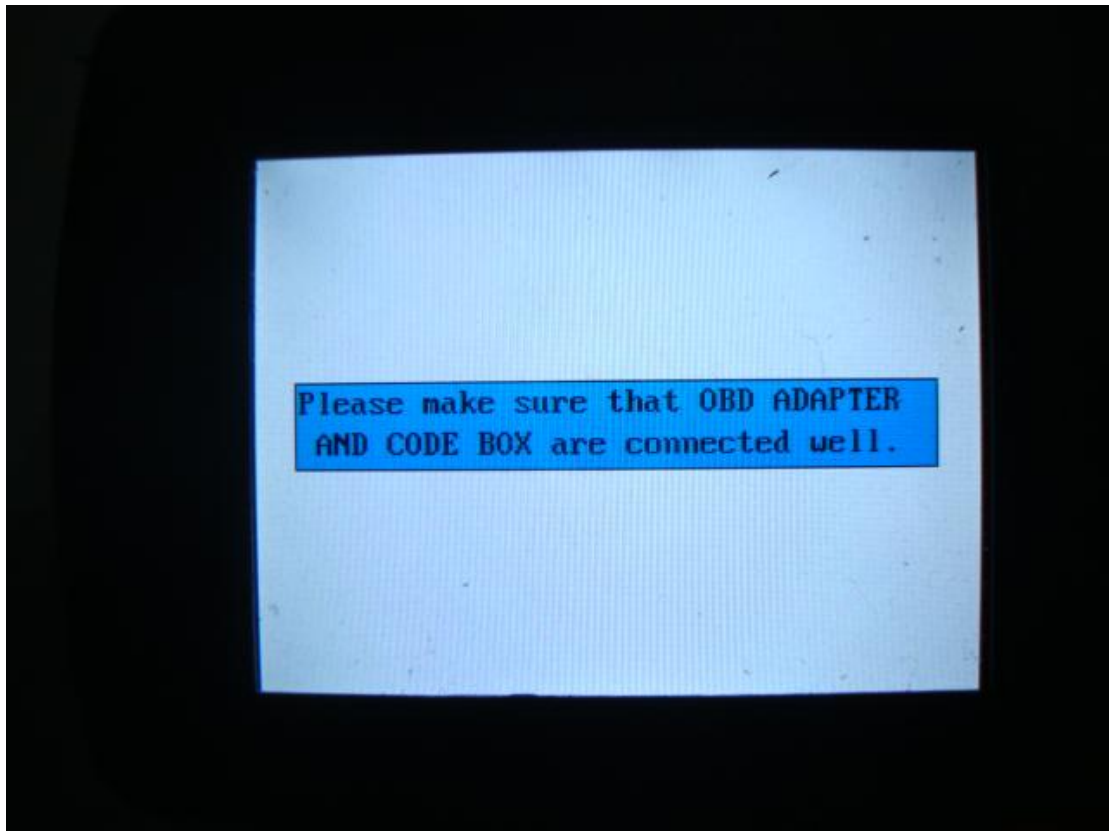


PICTURE 9

press "OK" to continue.

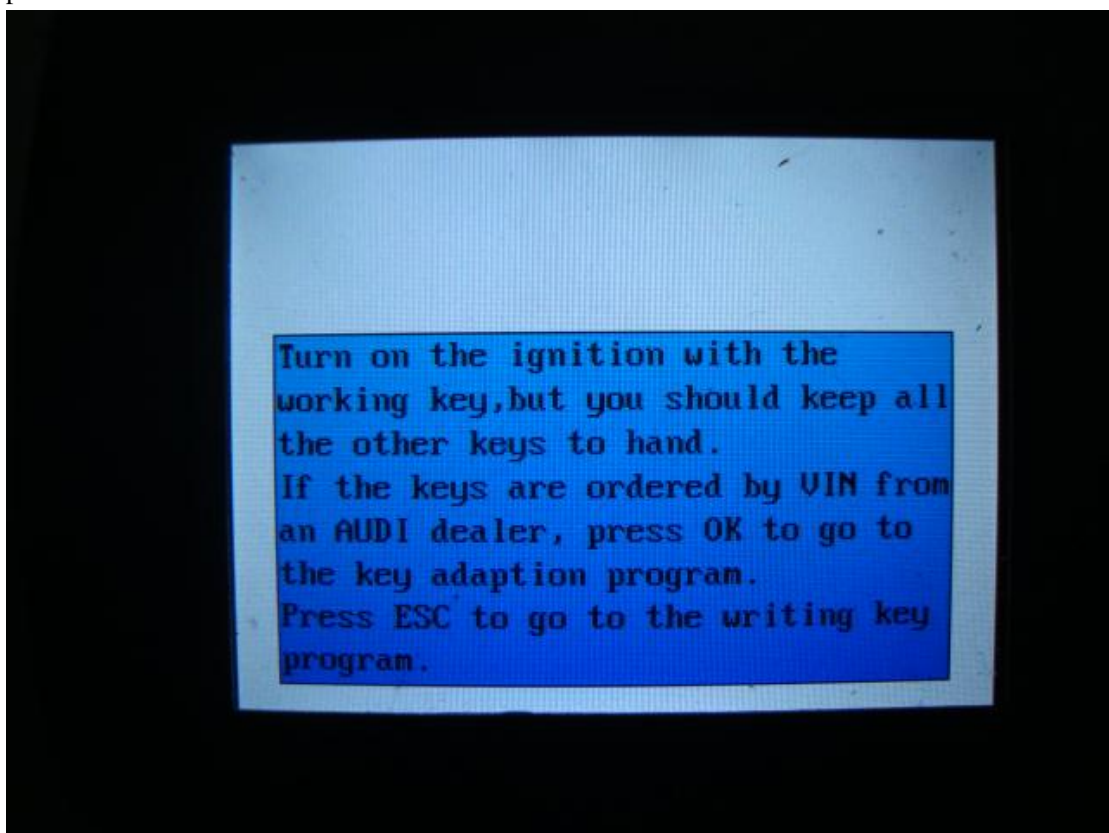


PICTURE 10

WRITING KEY In PICTURE 10, if press “ESC”, you will come to the WRITING KEY menu. Please put the new blank key in the transponder adapter correctly, and then press “OK”, the tool will write the blank key to a key of A4/Q5.

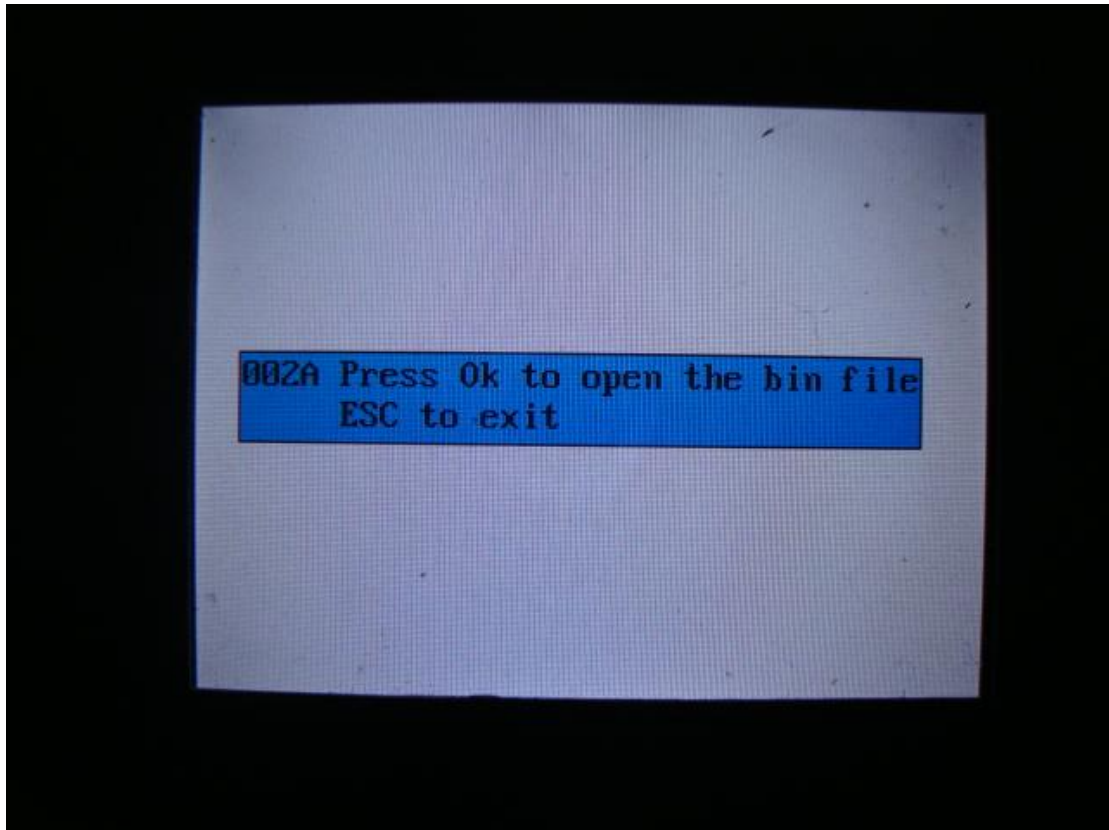


PICTURE 11

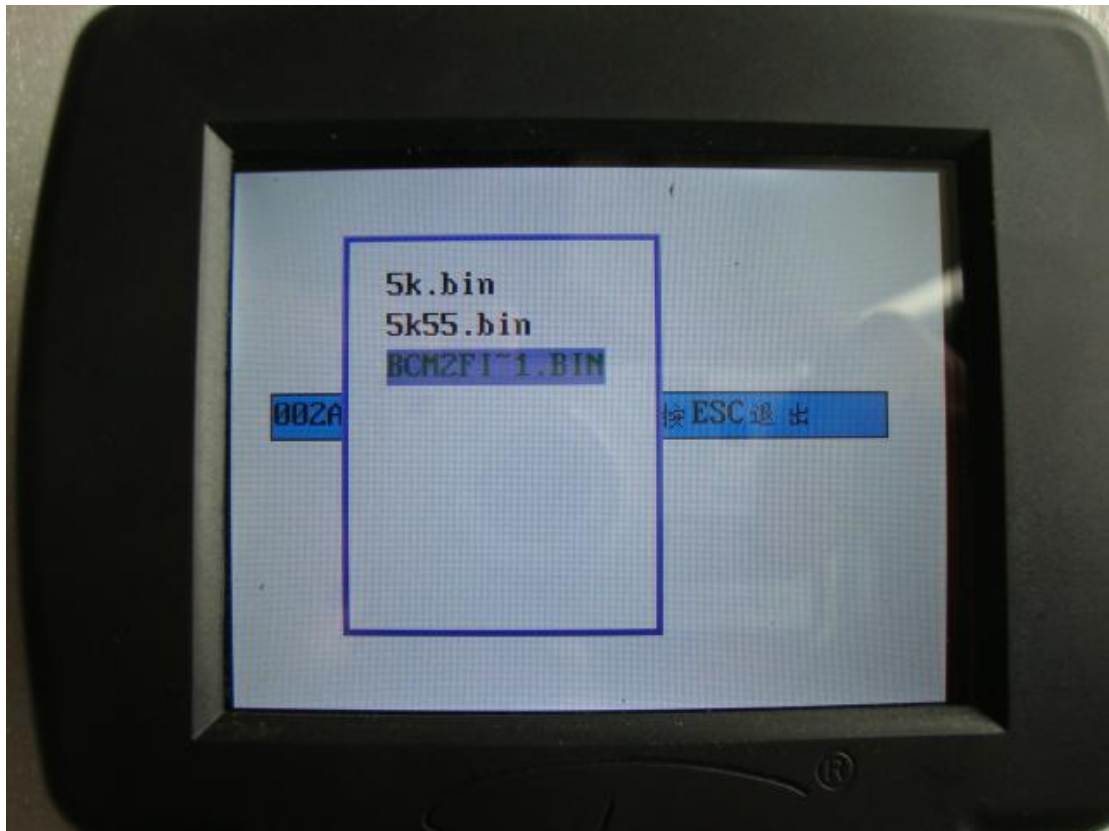

PICTURE 12


Choose the dump read, and press “OK” to continue, the tool will write the blank key legally.

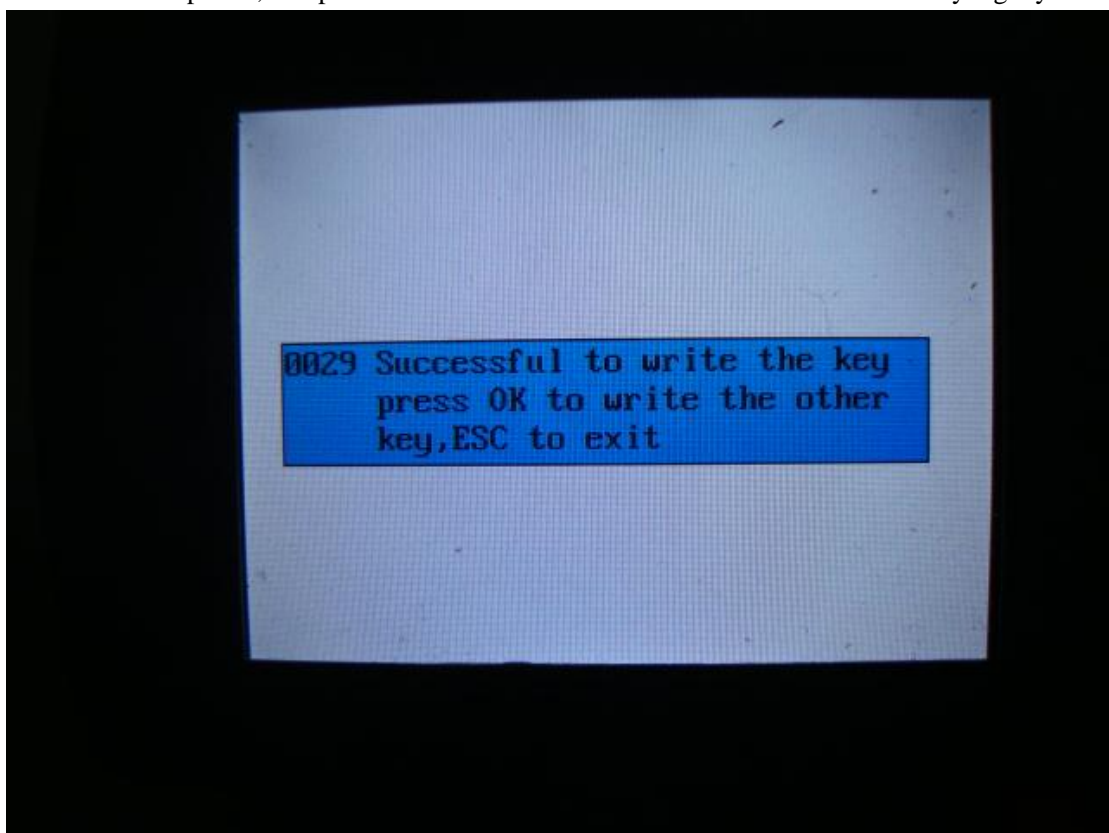

PICTURE13


If you want to write more keys press “OK”, or press “ESC” to go to the KEY ADAPTION

menu.

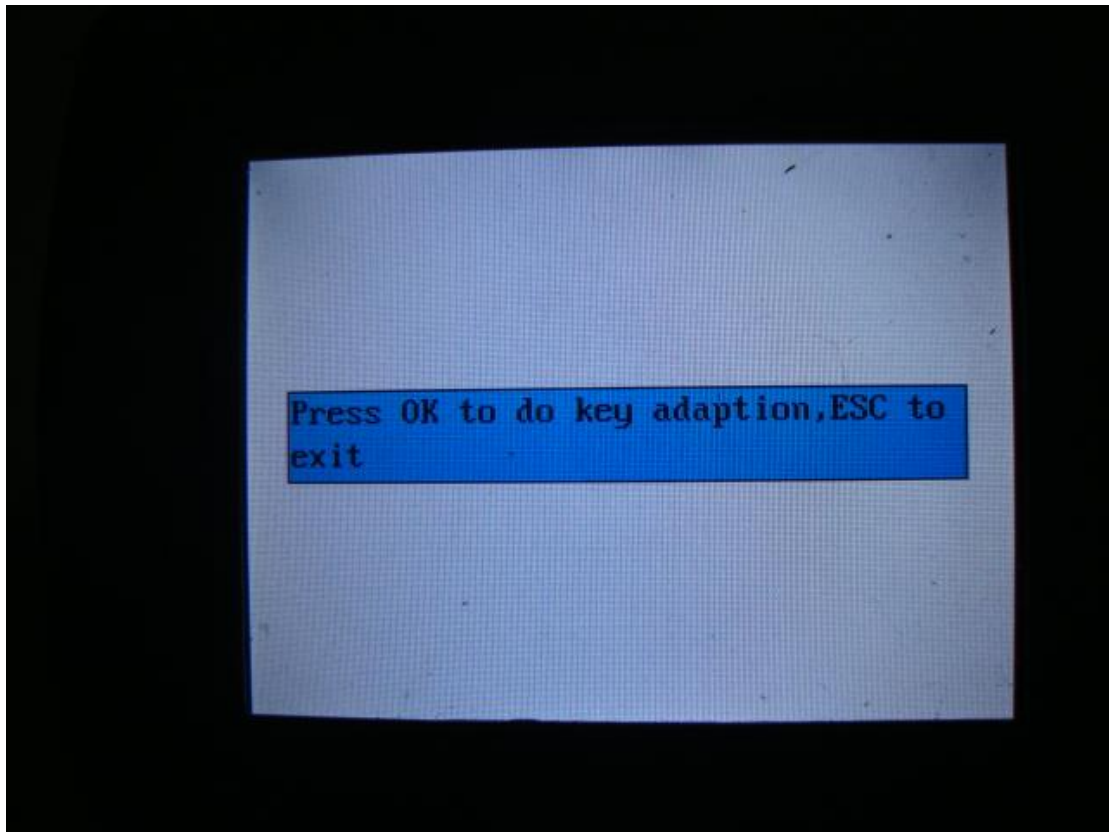


PICTURE14

KEY ADAPTION In PICTURE 14, if you press “OK”, you will come to the KEY ADAPTION menu.

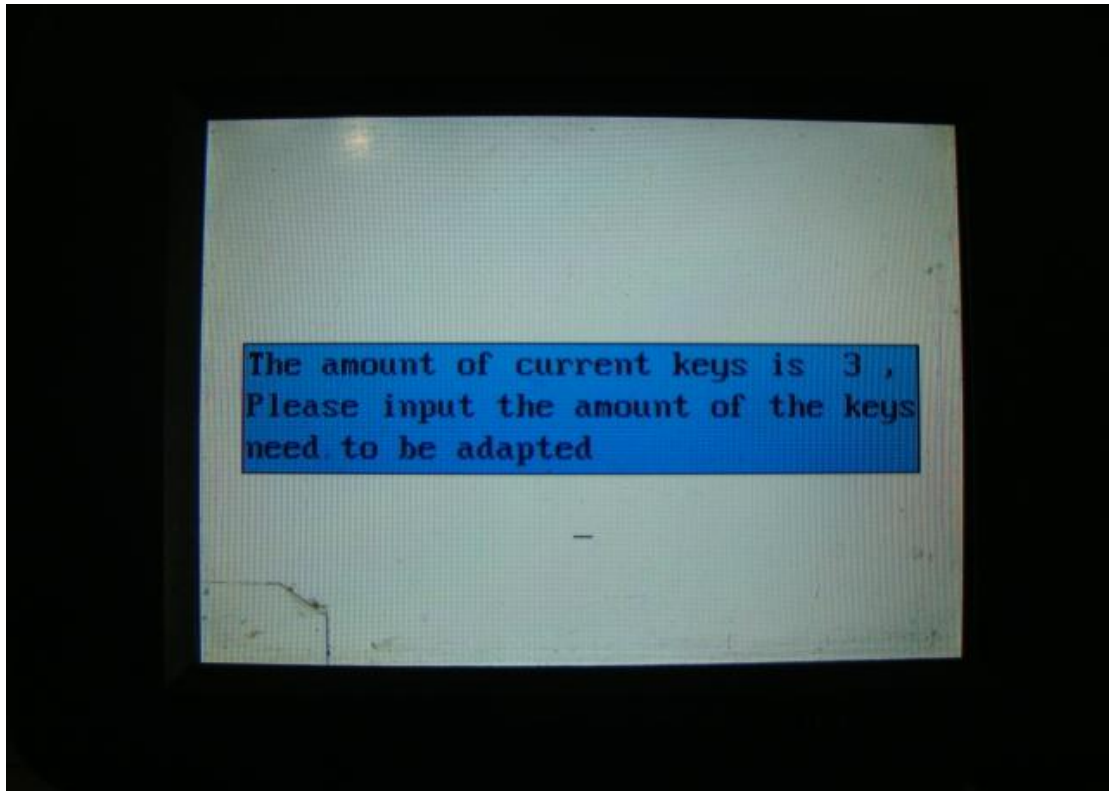

PICTURE 15

it will read out the amount of current keys.

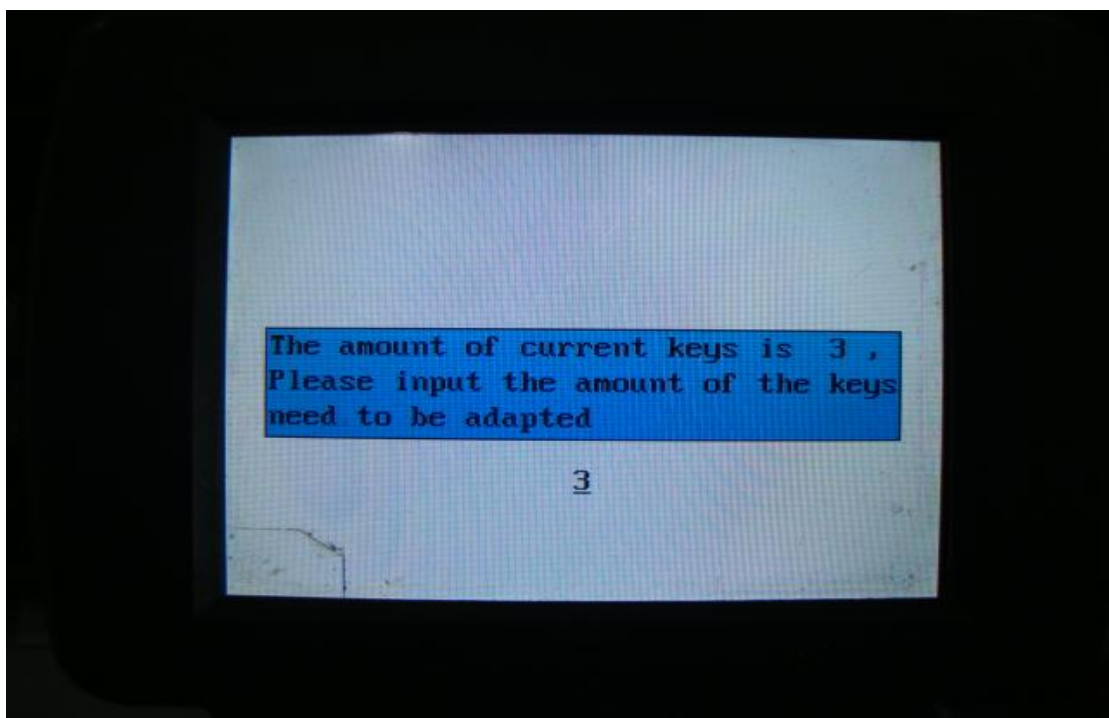


PICTURE 16

Input the new amount you want. Press "OK", then insert the keys to be adapted into the ignition and hold more than 1 second. The odometer will display the state of the key.




PICTURE 17

After done, pulling out the key and the tool will show you finished. This process need to be finished within 30 seconds.

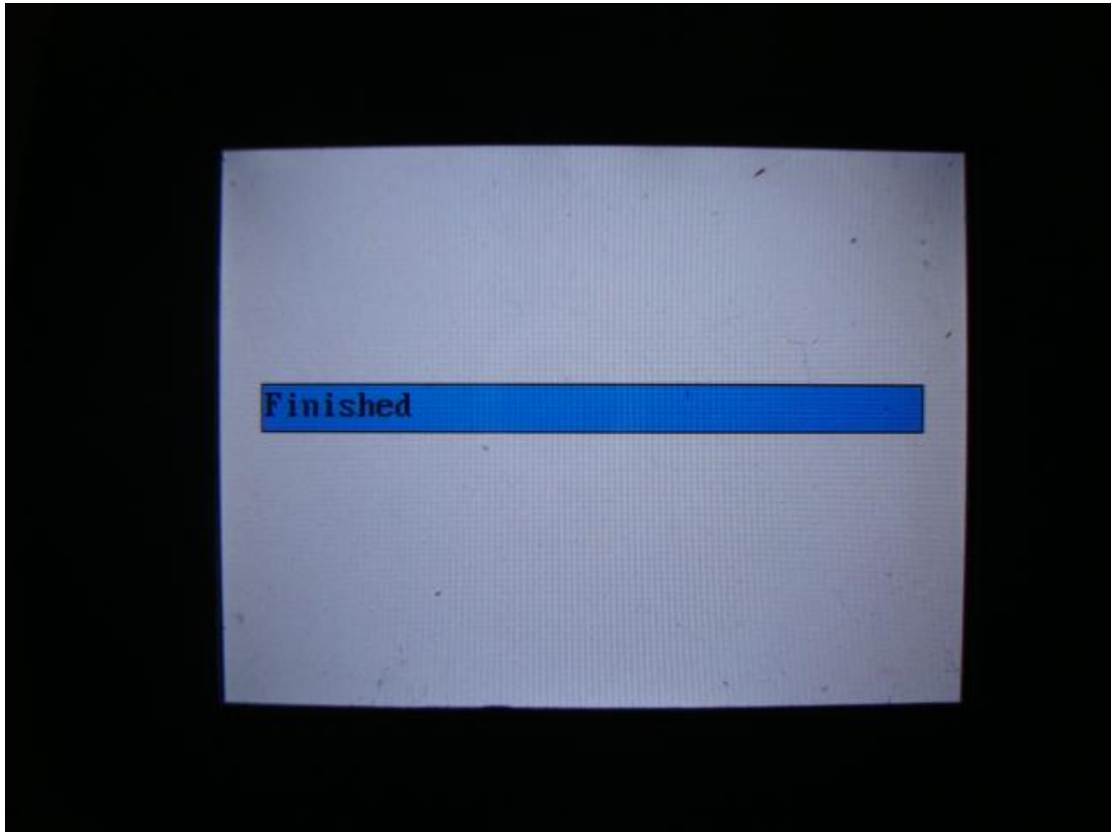


PICTURE 18

3. **“CHECK KEY STATE”** This option is used for checking the key state of users. It is lock, unlock, smart, or normal.

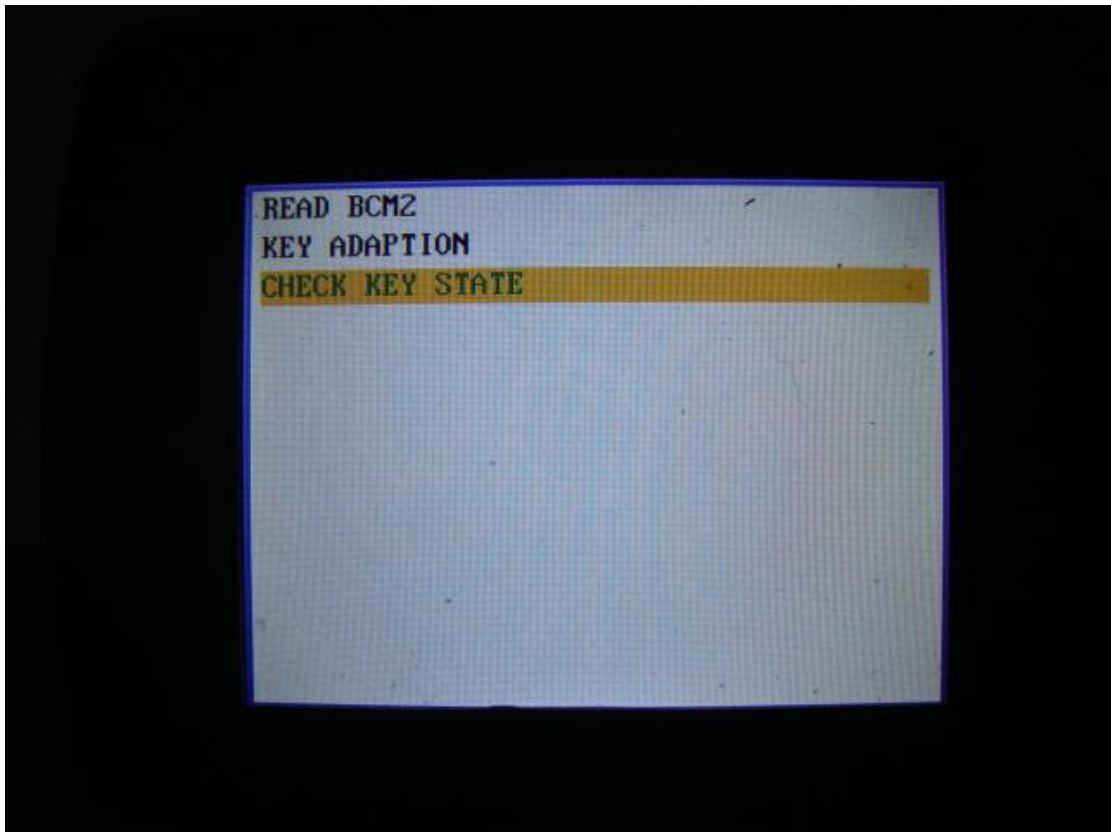

PICTURE 19

Put the key on TRANSPONDER ADAPTER , press “OK” to continue,the tool will show you the current state of the key.

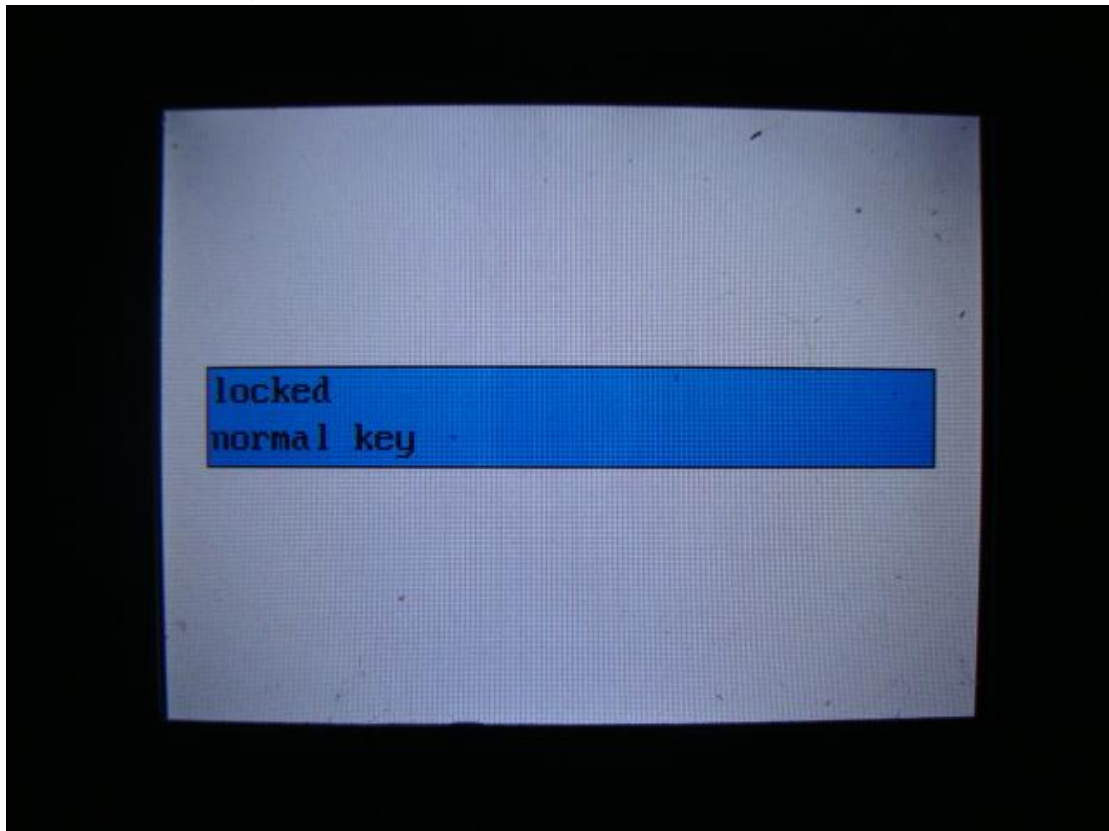

PICTURE 20



PICTURE 21 BCM2 position in the car