




# CMM ADAPTER




# HONDA Civic-NEC 01-up

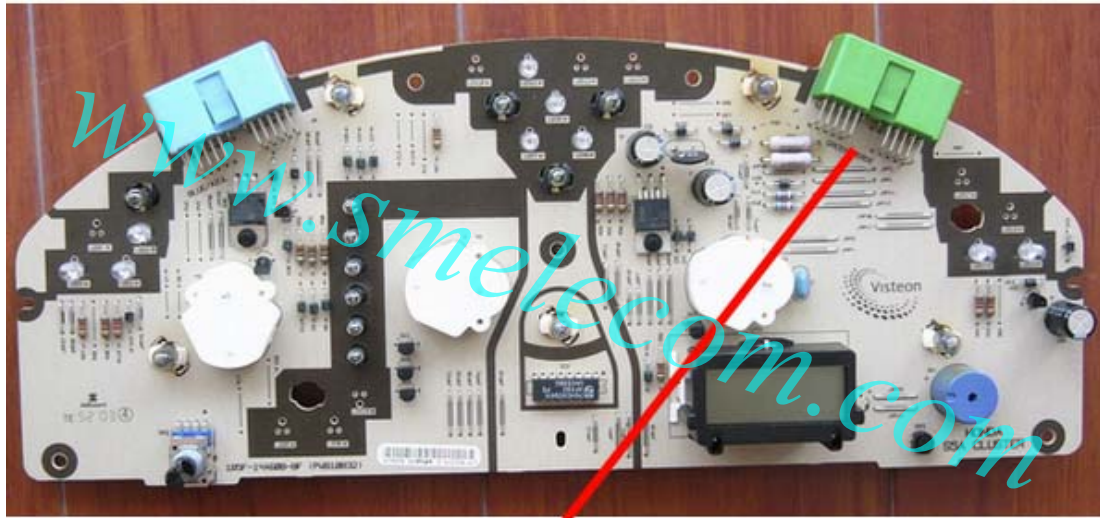

# FORD Escape 01-03

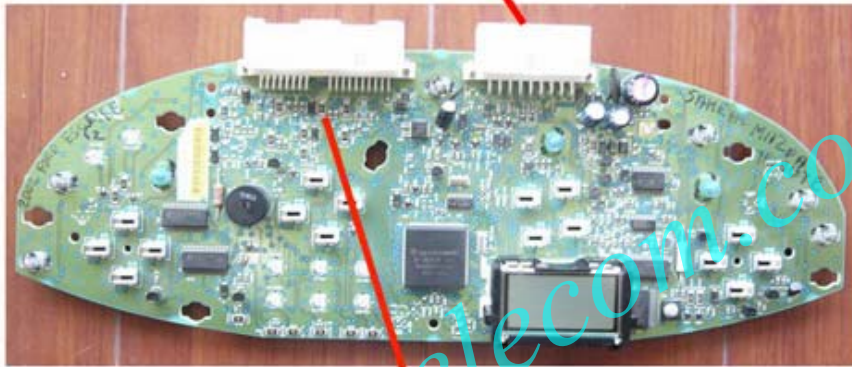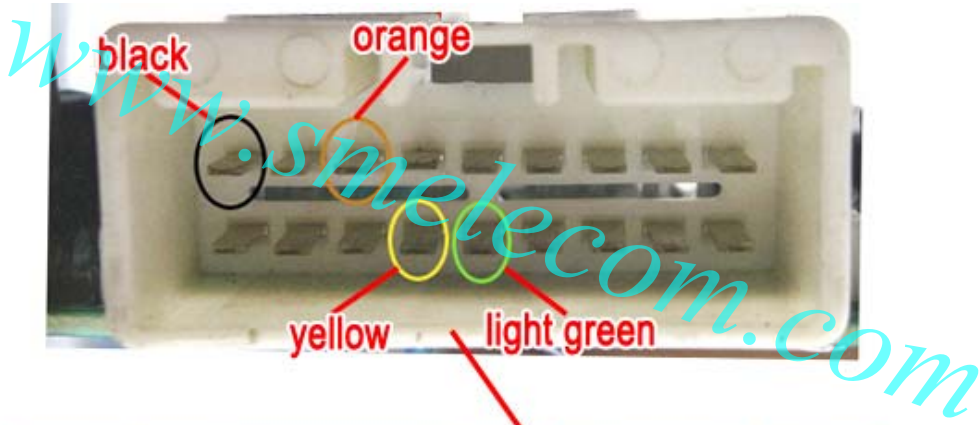



**FORD Mustang 98-03**

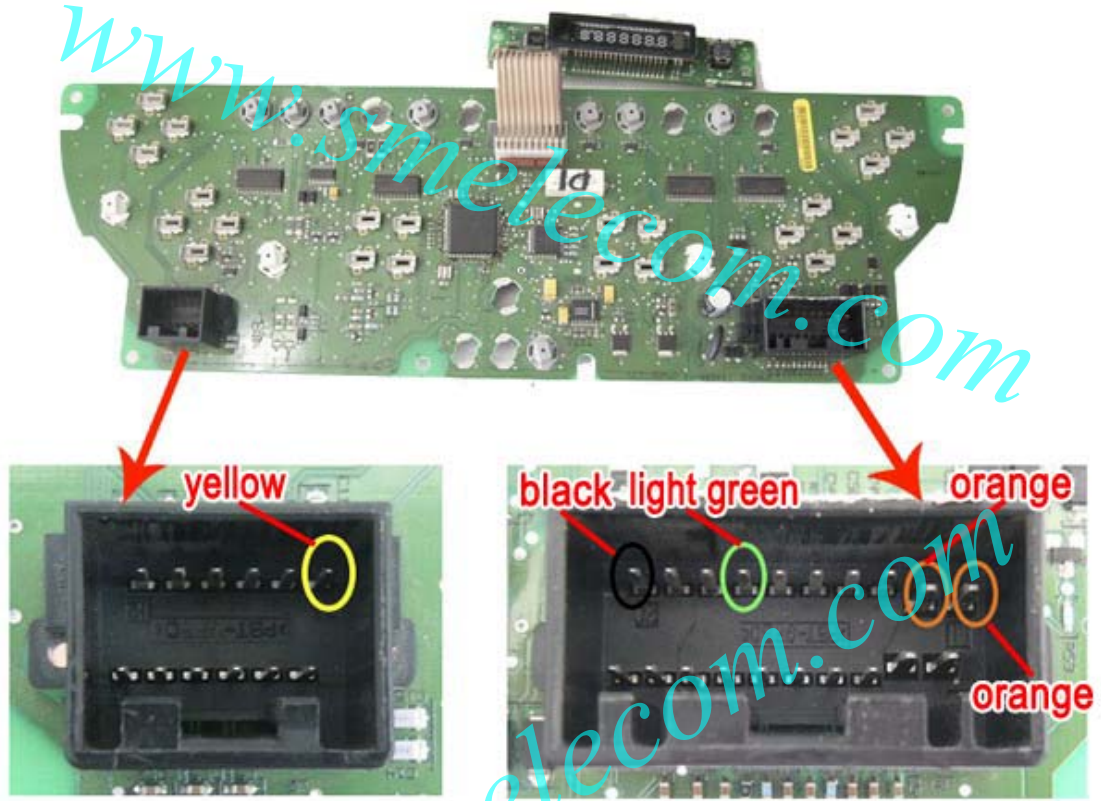


**FORD WindStar 01-03**



**HONDA CRV B32 01-02**

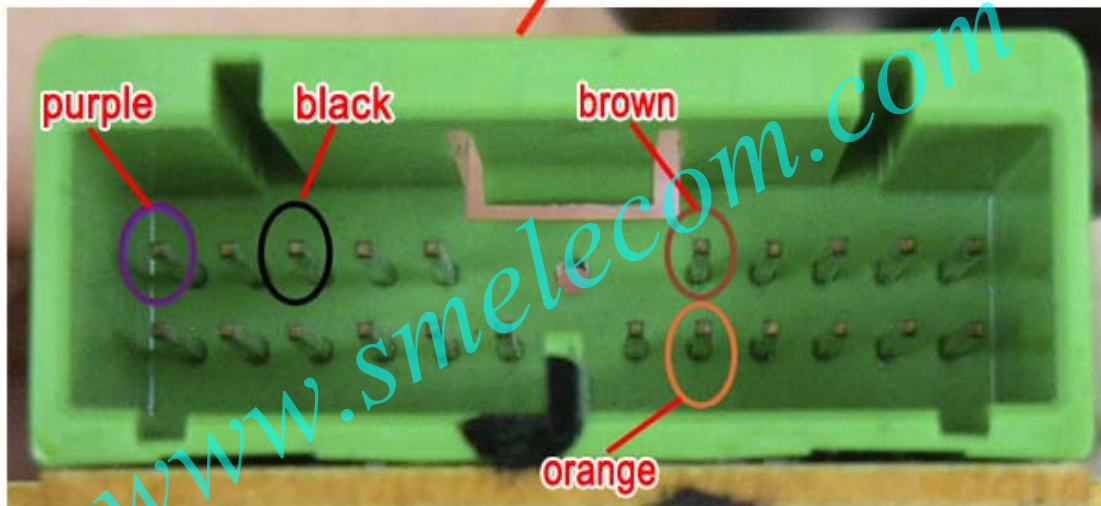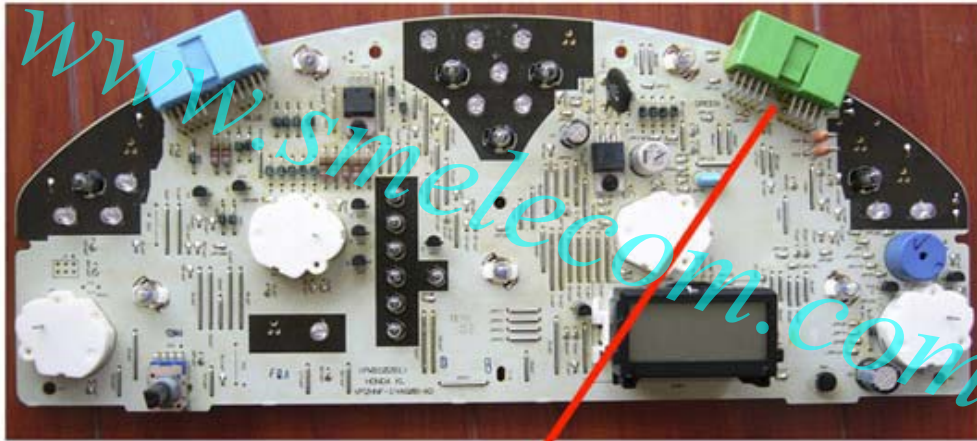

LINCOLN TOWN CAR 2004-up

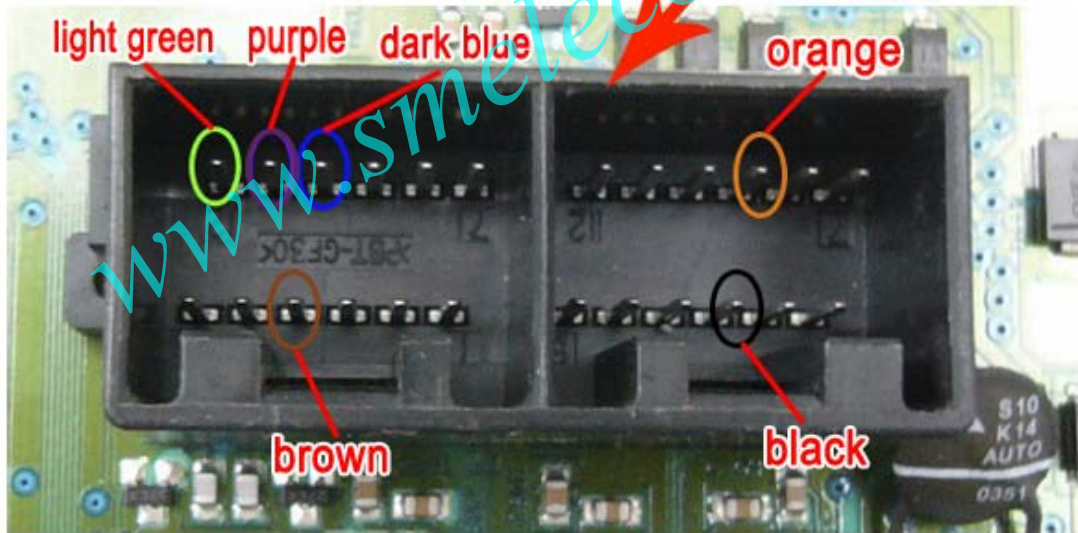


LINCOLN LS 99-02








LINCOLN LS 03-up

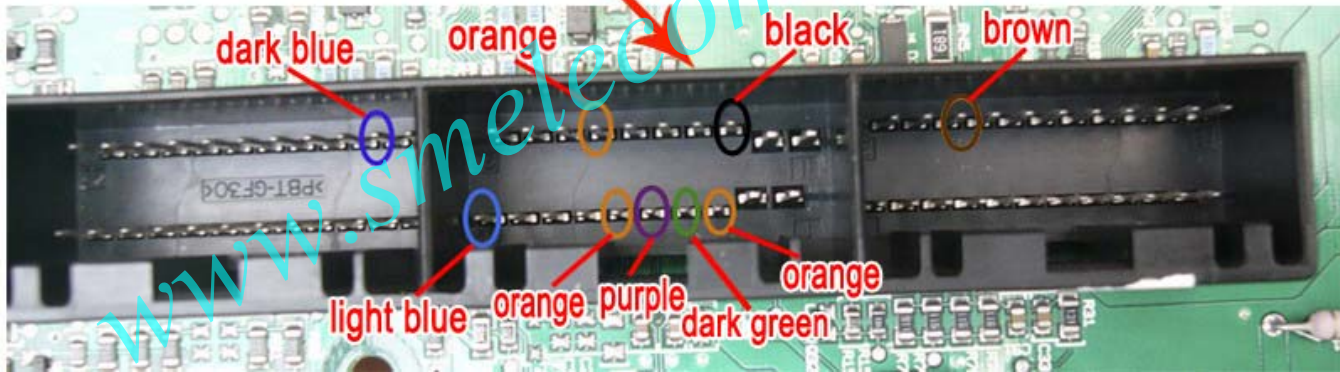


**Lincoln Town car 99-03**

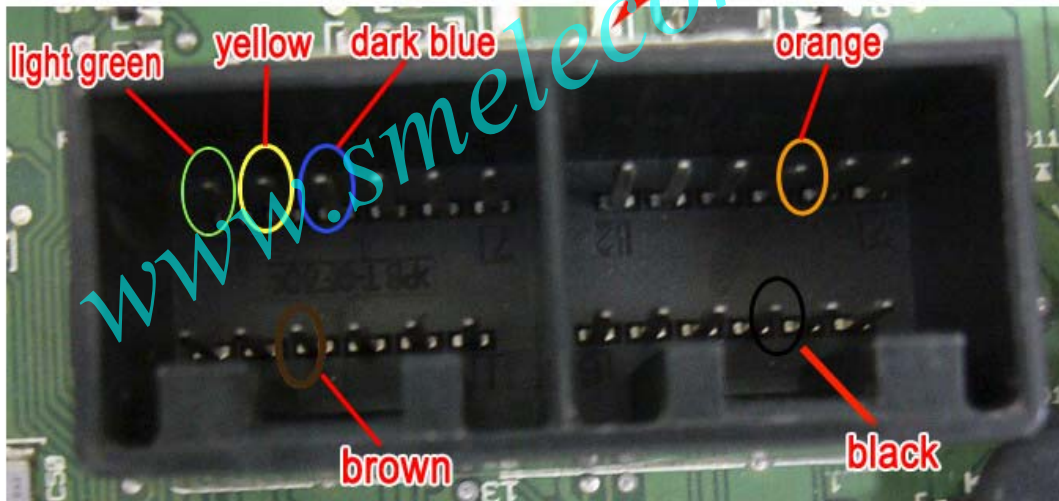


# Jaguar S-Type 99-011

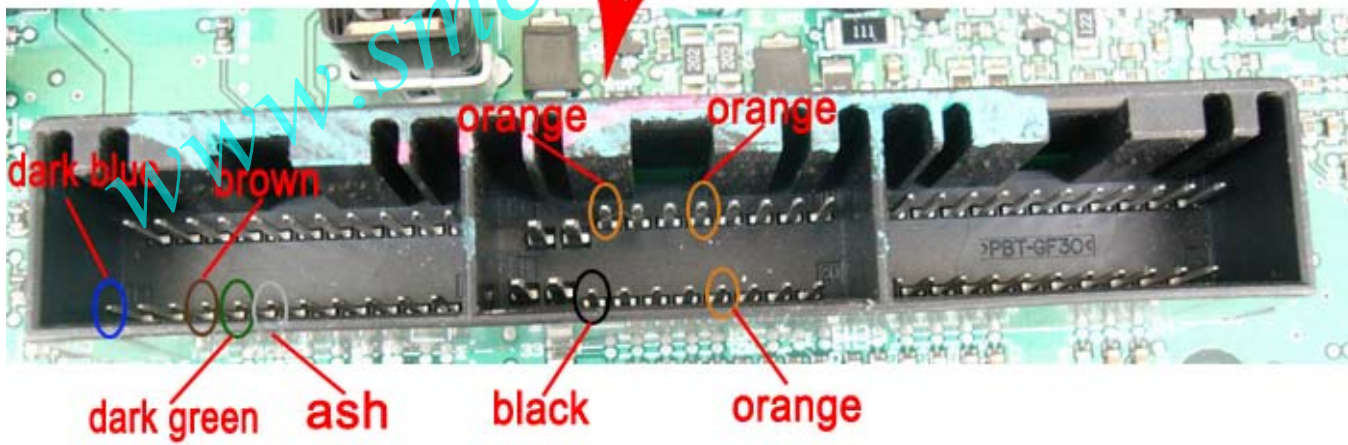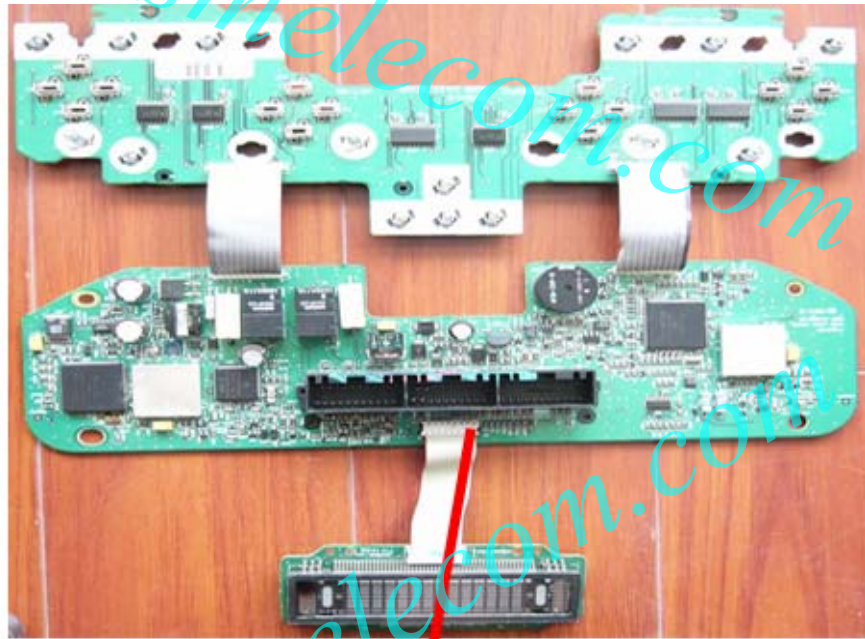

FOCUS 98-04

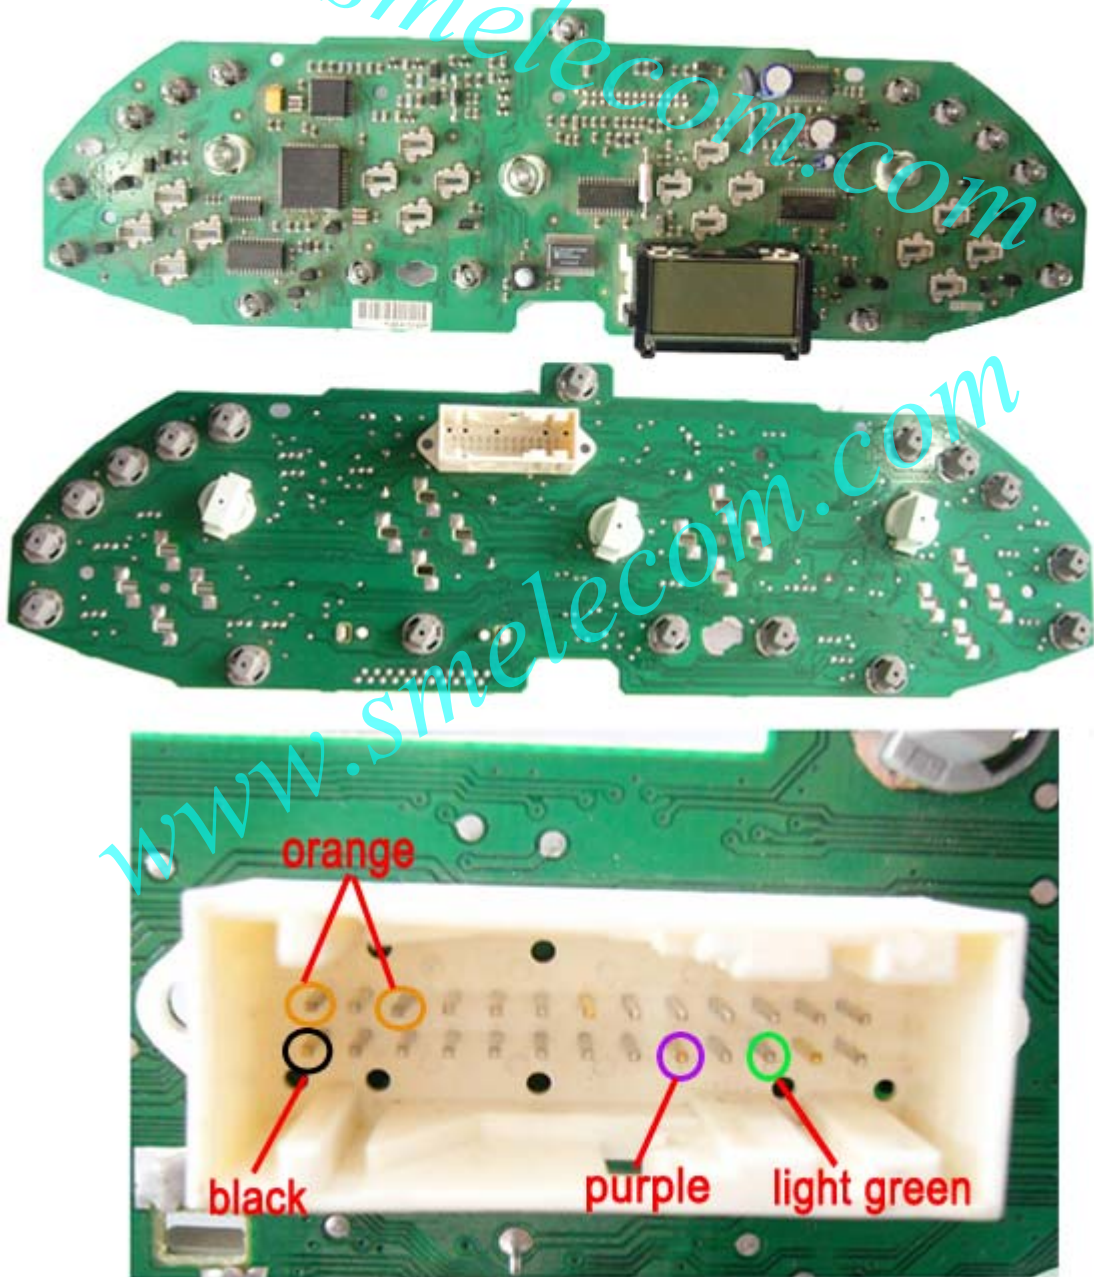

**FORD Expedition 99-02**

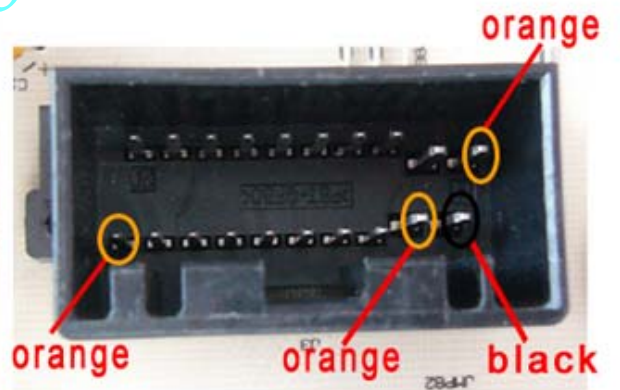

Ford 150 98-03

