


SMELECOM BMW STOP BLOCKER INSTALLATION INSTRUCTIONS

Please follow instructions carefully

- 1. Remove instrument cluster.**
- 2. Remove dash plug.**
- 3. Connect BMW Stop Blocker in sequence shown below**



5. Completed job. See below.

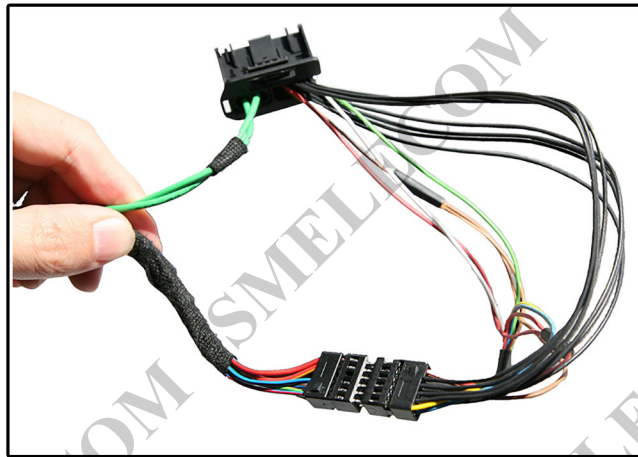

6. Install instrument cluster back in car.

Operation

The BMW Stop Blocker can be controlled by the BC Button and MODE Button, as shown in the pictures below.



Ignition on. Press BC button on end of steering wheel stalk and MODE button on steering wheel at the same time to switch on/off counting.

Left turn indicator flashes - ON

Right turn indicator flashes - OFF

ATTENTION!!!!

**EVERY TIME THE VEHICLE IS TURNED OFF AND ON AGAIN,
THE STOP BLOCKER WILL NEED TO BE ACTIVATED AGAIN.**