


BMW FEM CAN BLOCKER MANUAL


1.Remove the FEM Model

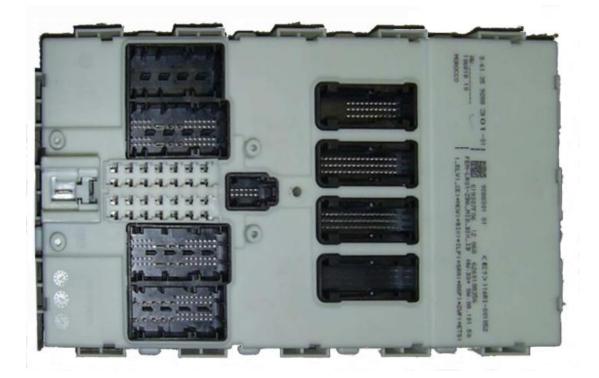

2. Open the case, and remove the unit

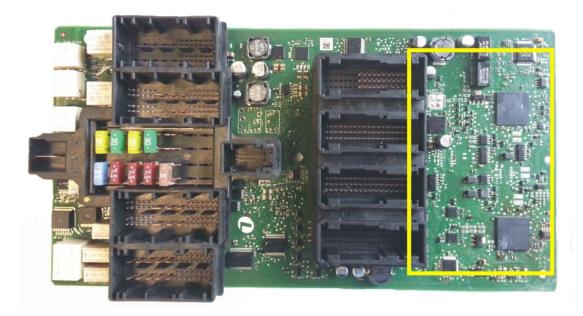

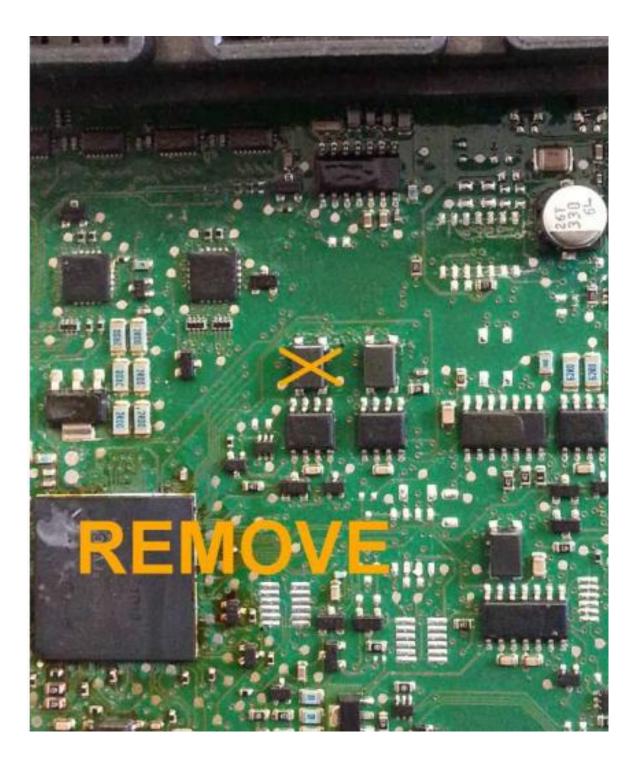

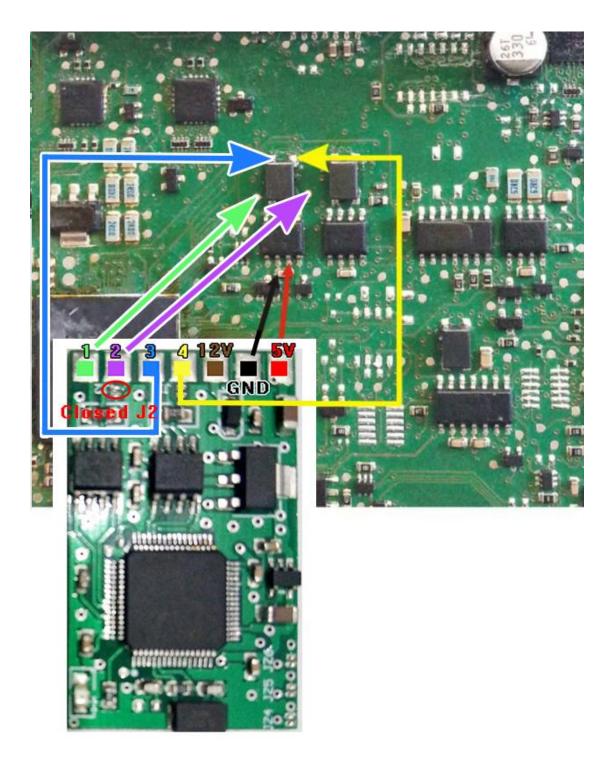

3. Connect the wires as the figures shown:

Install BMW FEM can blocker successfully.