
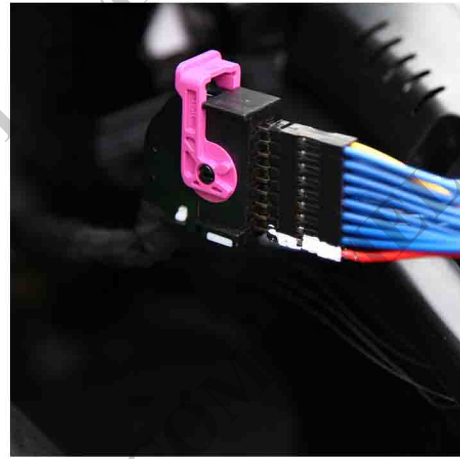



SMELECOM VAG STOP BLOCKER INSTALLATION INSTRUCTIONS

Please follow instructions carefully

- 1. Remove instrument cluster.**
- 2. Remove dash plug.**
- 3. Insert male connector of stop blocker into dash plug. See below.**

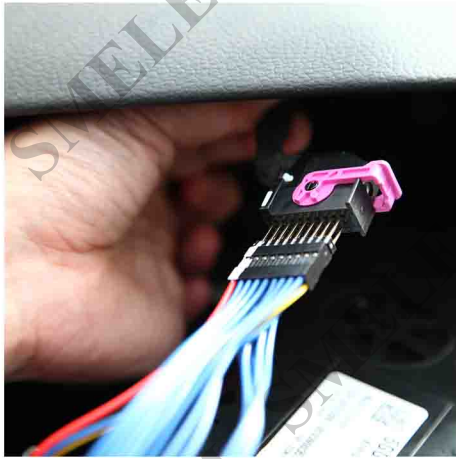

- 4. Insert female connector of stop blocker into cluster socket. See below.**

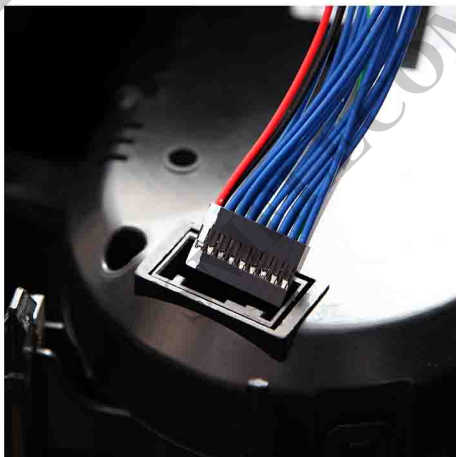

5. Completed job. See below.



6. Install instrument cluster back in car.

Operation

The VAG stop blocker can be controlled by 2 methods, by the OK button or the brake pedal. When the car is stationary with ignition on (engine not running) push and hold the OK button for 5 seconds, the stop blocker will switch between modes. Or when stationary with ignition on (engine not running) press the brake pedal quickly 3 times within 1.5 seconds to switch between modes. The mode chosen is indicated by the two turn light indicators on the instrument cluster.

1. Flashes once indicates **“normal mode”** (mileage recording normal)
2. Flashes twice indicates **“half mode”** (mileage recording half of true value)
3. Flashes three times **“stop mode”** (mileage recording stopped)

