


SMELECOM BMW STOP BLOCKER INSTALLATION INSTRUCTIONS

Please follow instructions carefully

- 1. Remove instrument cluster.**
- 2. Remove dash plug.**
- 3. Connect BMW Stop Blocker in sequence shown below**



5. Completed job. See below.

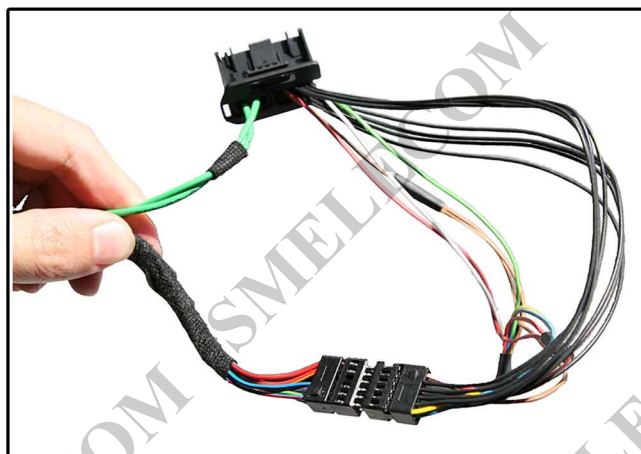

6. Install instrument cluster back in car.

Operation

The BMW Stop Blocker can be controlled by the “START/STOP ENGINE BUTTON”, as shown in the pictures below.



DEACTIVATED



ACTIVATED

Press the OFF button to activate / deactivate.
When the LED is on, the STOP BLOCKER is activated.

ATTENTION!!!!

**EVERY TIME THE VEHICLE IS TURNED OFF AND ON AGAIN,
THE STOP BLOCKER WILL NEED TO BE ACTIVATED AGAIN.**